


## Jumper Settings TerraTec EWX 24/96

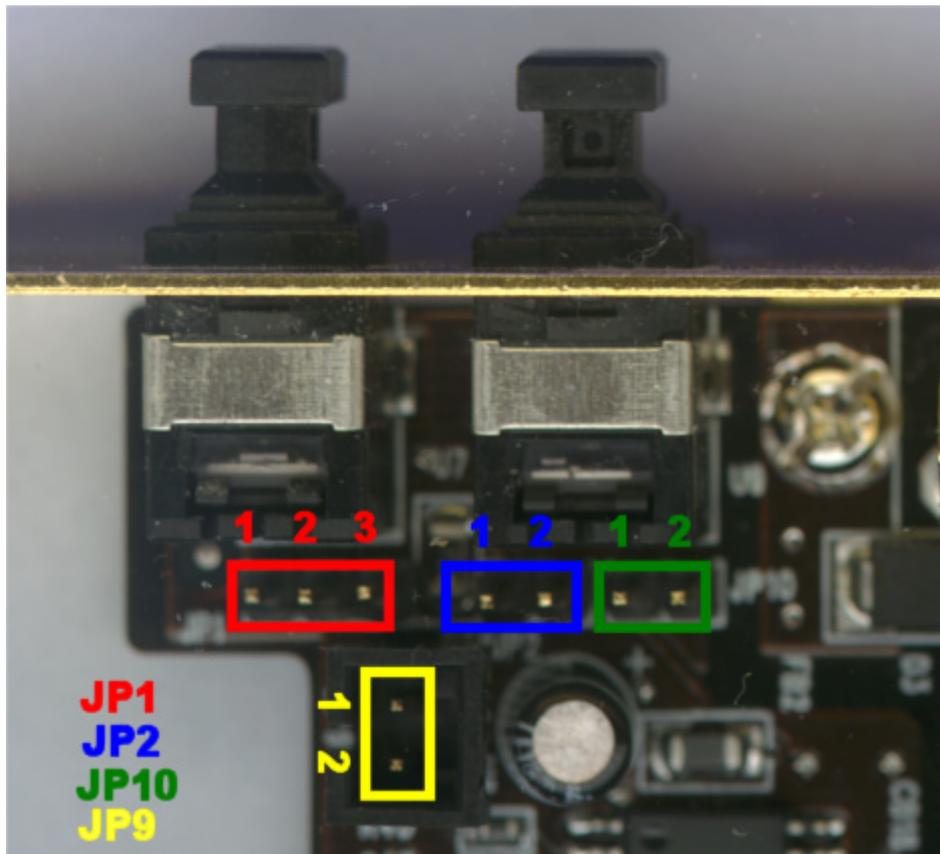

### **JP1 = Selects the Digital Input Source**

1-2 = External Input (optical)

2-3 = Internal Input (TTL or S/PDIF electrical)

### **JP2 = Internal Digital Source Format**

Open = CD-ROM Audio, TTL Level

Closed = S/PDIF electrical

### **JP9 = Internal Digital Input (CD-ROM Audio, TTL Level)**

1 = Signal

2 = Ground

### **JP10 = Internal Digital Output**

1 = Signal

2 = Ground