

Media Player

NOXON M740

Manual



M740

CE/FCC declaration

TERRATEC Electronic GmbH · Herrenpfad 38 · 41334 Nettetal · Germany
hereby declare that the product:

NOXON M740 (Full HD Network Multimedia Player)

to which this declaration refers is in compliance with the following standards or standardizing documents:

- EN 55022:1998 + A1:2000 + A2:2003, CLASS B
- EN 55024: 1998 + A1:2001 + A2:2003
- EN 61000-3-2:2000, Class A
- EN 61000-3-3:1995+A1:2001
- IEC 61000-4-2:2001
- IEC 61000-4-3:2002+A1:2002
- IEC 61000-4-4:2004
- IEC 61000-4-5:2001
- IEC 61000-4-6:2003+A1:2004
- IEC 61000-4-8:2001
- IEC 61000-4-11:2004

This device may only be used in the following environments and operating conditions: residential, commercial and industrial environments, as well as small businesses. The basic protective requirements of EMC Directive 89/336/EEC are thus fulfilled.

CE conformity has been demonstrated. As stipulated in R&TTE Directive (1999/5/EC), this device corresponds to a Class 1 radio system (Commission Decision 2000/299/EC). The device also complies with FCC Part 15, Subpart B, Class B, and ANSI C63.4:2003.

This declaration is based on:

- Test report(s) of the ADT Corp. testing laboratory

Index

CE/FCC declaration	2
Important safety information	4
Welcome!	5
Scope of delivery	5
Overview	6
Front	6
Back	6
Remote control	9
Connection	14
Power supply	14
Video	14
Audio	14
Wired network (LAN)	15
Wireless network (WLAN)	15
Memory cards	15
External storage devices (USB)	15
External hard disk (SATA)	15
Internal hard disk (SATA)	15
PC/Mac (USB)	16
Setup	17
Setup assistant	17
UPnP server	17
The M740 in server mode	18
The M740 in client mode	20
Handling	22
Typical applications	22
Main menu	23
Media menu	24
Movies menu	25
Music menu	25
Photo menu	25
Data menu	25
Setup menu	26
Appendix	34
Technical specifications	34
License information	34

Important safety information

This device has been developed and manufactured so that it does not endanger personal safety. Improper use can cause electric shock or fire. The safety features integrated into this device can protect you only if you observe the following instructions for installation, use and maintenance:

- Please read this operating manual in its entirety.
- Observe all warnings and instructions.
- Do not use the device close to water.
- Clean it using a dry cloth only. Do not use any liquids!
- Do not cover up any ventilation openings. Install the device according to the instructions in this manual.
- Do not install the device in the immediate vicinity of heat sources such as radiators, ovens or other devices that give off a great deal of heat.
- Route all cables so that no one can step on them and they are not pinched, especially not on the connector, on the power outlet or at the location where the network cable exits the device.
- Unplug the power cable from the socket during electrical storms or when the device will not be used for a long time.
- All maintenance work may be carried out by qualified service technicians only. Maintenance work is required whenever the device has been damaged in any way, e.g. if power cables or connectors are damaged, liquid gets into the device or objects fall into it, if it has been exposed to rain or moisture, if it no longer functions normally or has fallen down.
- The device may be operated at ambient temperatures of 5 °C to 35 °C (41 °F to 95 °F) only.
- Do not drop the device or expose it to mechanical shock!
- Do not move the device as long as it is switched on.
- Place the device on a level, dry surface to prevent fire and electrical shock hazards as well as possible damage to the player itself.
- Do not place objects filled with liquid such as vases or bottles on the device.
- If the device has been exposed to extreme differences in temperature, allow it to adjust to the room temperature for one hour before plugging it in. Condensation may have formed inside the device, which impairs its functionality or can cause damage to the device itself.

Welcome!

Thank you very much for choosing a NOXON product!

Your NOXON M740 offers everything you need to play back your media collection on your big-screen TV in brilliant (HD) resolution of up to 1080p. The great number of connectors offered make for an easy and flexible combination with your other entertainment devices.

You can play back movies and music from a large number of diverse sources:

- USB memory sticks, USB hard disks and CD/DVD drives
- SD/MMC memory cards
- Internal SATA hard disk*
- External SATA hard disk*
- Wired networks (LAN)
- Wireless networks (with the NOXON WLAN stick*)

* The NOXON WLAN stick, external and internal SATA hard disks as well as other storage devices are optional additions for your M740. They are not included in the scope of delivery.

Scope of delivery

Please start by making sure that the contents of the package are complete:


- NOXON M740 media player
- Power cable
- HDMI cable
- A/V cable
- RGB cable
- SATA cable
- Remote control with battery
- Manual (EN/DE)
- Quick start guide (EN/DE/FR/IT/ES/NL)
- Service request form

Enjoy your new NOXON M740!

M740


Overview

Front

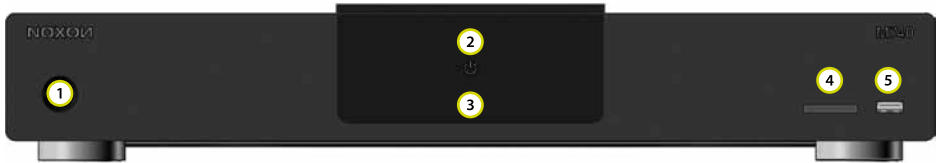

1. On/Off button
2. Operating status display
3. Infrared receiver
4. SD/MMC card slot
5. Front USB port for external storage devices

Back

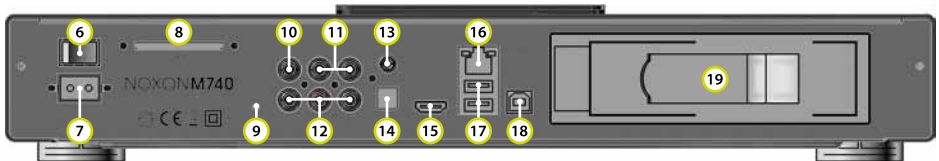

6. On/Off switch
7. Connection socket for power cable
8. SATA port
9. Reset button
10. Composite video output
11. Stereo audio outputs
12. Component video outputs
13. Coaxial S/PDIF audio output
14. Optical S/PDIF audio output
15. HDMI 1.3 interface
16. Network port (RJ-45)
17. USB ports for external storage devices
18. USB port for connection to a PC/Mac
19. 3.5" SATA hard disk drive bay

1. On/Off button

Activates the M740 or switches it into standby mode.

2. Operating status display

This LED lights up red in standby mode, while in active mode it shines blue.

3. Infrared receiver

Receives signals from the wireless infrared remote control. Please do not cover this sensor.

4. SD/MMC card slot

Play back movies, photos, music etc. from cards placed into this slot. The card reader supports the following file formats: SD, SD-HC, MMC, MS and MS Pro.

5. Front USB port for external storage devices

Media files can also be accessed from external USB storage devices like hard disks and memory sticks (USB 1.0, 1.1 and 2.0 up to 480 Mbit/s).

6. On/Off switch

Deactivating the M740 by this switch will completely disconnect it from mains and stop any energy consumption of the unit. However, the media player cannot be activated by the remote control or the On/Off button on the front panel in this mode.

7. Connection socket for power cable

Please only use the included cable for connecting your M740 to mains. Please make sure that this cable shows no sign of wear or any defects.

8. SATA port

Use the supplied cable to connect a SATA hard disk (not eSATA). Once it has been connected to this port, you can play back audio and video data from the external drive.

9. Reset button

On rare occasions (e.g. after updating the firmware) it can happen that the M740 freezes so that it does not react to commands anymore. This situation requires a reset. Please switch the media player off with the On/Off switch on the back panel. Then use a ball pen tip or something similar to push the reset button and hold it for five seconds while switching the M740 back on again.

10. Composite video output

This yellow RCA connector carries an analogue video signal without sound. Please note that the image quality of the other video outputs is superior to the quality of the composite output. Therefore you should only use this option if the others cannot be used for your purposes.

M740

11. Stereo audio outputs

These two RCA outputs carry the analogue audio signal (the left channel coming from the white connector, the right channel from the red one).

12. Component video outputs

As a better alternative to the composite output you can connect your TV set and the M740 via the component video output using the supplied cable. Please note that also in this case the output does not carry an additional audio signal. The colour codes of the corresponding RCA connectors are red, green and blue (RGB).

13. Coaxial S/PDIF audio output

This yellow RCA connectors carries the audio signal(s) in the digital S/PDIF format. The digital signal transfer is lossless and, depending on the source file, audio will be available in mono, stereo or surround.

14. Optical S/PDIF audio output

The digital audio signals can alternatively be transferred through a light wave cable according to the TOSLINK standard. If you are using this type of cable, please avoid bending it too much.

15. HDMI 1.3 interface

This interface grants the best video and audio quality by transferring digital signals from your M740 to your TV through the supplied cable. If your TV set has an HDMI connector, please make sure to use it instead of the other video connectors in order to enjoy the best playback quality your media player can offer (up to 1080p 60Hz).

16. Network port (RJ-45)

This LAN/Ethernet connector lets you integrate the M740 into your cable home network at 10 or 100 MBit speed. Please use a standard network cable with RJ45 connectors. A green LED located at this port indicates a proper connection on both ends of the cable.

17. USB ports for external storage devices

In addition to the corresponding port on the front panel these connectors can be used to access media data from external USB storage devices like hard disks and memory sticks (USB 1.0, 1.1 and 2.0 up to 480 Mbit/s).

18. USB port for connection to a PC/Mac

If you have fitted an internal SATA hard disk into your M740 you can use this port to connect it with your PC or Mac. Your NOXON will be recognized as an external hard disk device without the need to install any drivers first. This way you can transfer movies, music and photos to your M740 fast and conveniently.

19. 3.5" SATA hard disk drive bay

You can upgrade your M740 with an internal 3.5" SATA hard disk (not included). Please

make sure to deactivate the media player by the power switch on the back panel before opening this bay. We suggest to use a hard disk with 5,400 RPM because of the lower noise floor this type of HDD usually produces.

Remote control


The supplied infrared remote control is the exclusive command centre for your M740. Please insert the supplied battery before first use:

- Open the battery cover on the rear side of the remote control.
- Insert the battery into the battery compartment as indicated by the + and - symbols.
- Close the battery compartment again with its cover.

Please follow this common advice when handling batteries:

- If the remote control does not function properly or the range is no longer adequate, replace the battery with a new one.
- Remove batteries when they are completely empty or if the remote control will not be used for an extended period. This prevents leaky batteries from damaging your remote control.
- Never throw batteries into a fire!
- Ensure that you use alkaline batteries or, even better, rechargeable batteries.
- Dispose of used batteries at the appropriate disposal facilities.
- Always dispose of batteries in compliance with legal regulations. This helps to protect the environment.

M740

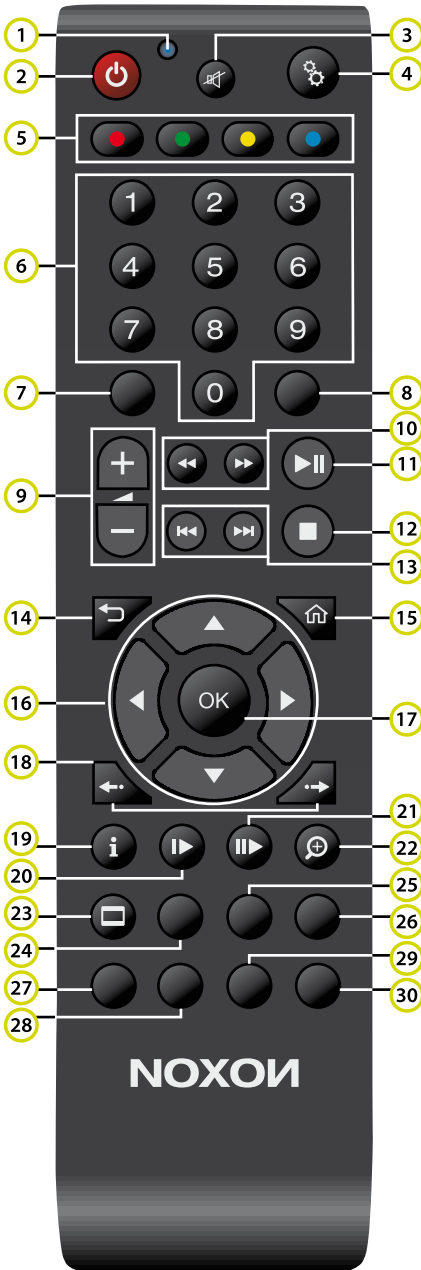

1. Activity monitor LED
2. Standby
3. Mute
4. Settings
5. Options
6. Keypad
7. Repeat
8. Goto
9. Volume Up/Down
10. Fast Backward/Forward
11. Play/Pause
12. Stop
13. Skip Back/Forth
14. Before
15. Main Menu
16. Navigation
17. OK
18. Time Leap Back/Forth
19. Option
20. Slow
21. Step
22. Zoom
23. 16:9
24. Angle
25. Menu
26. Title
27. TV Mode
28. A-B
29. Audio
30. Subtitle

1. Activity monitor LED

Lights up when one of the knobs is pressed. Please replace the battery if this should not be the case.

2. Standby

Switches your M740 on – please note that this can take a short while. A second press will switch the media player into standby or into server mode respectively.

3. Mute

Mutes the audio playback. A second press will return to normal audio playback at the volume which had been set before.

4. Settings

This opens the “Setup” menu of your M740. Here you can adapt the behaviour of your media player according to your individual wishes.

5. Options

These buttons activate additional options. The On-Screen-Menu will show you when and which specific options are available.

6. Keypad

You can enter the number 0 to 9 by using this keypad.

7. Repeat

Repeats single tracks/chapters or complete playlists. A second press will return to normal playback mode.

8. Goto

Depending on the current file format, this function lets you chose a specific track, chapter or point in time for playback.

9. Volume Up/Down

Increases or decreases the volume of the audio playback. Please be careful, as continuously high volumes can permanently damage your hearing.

10. Fast Backward/Forward

Increases the playback speed towards the beginning or the end of a track or a chapter. Repeated pressing will increase the speed of the accelerated playback.

11. Play/Pause

This button starts the playback of a media file. A second press will pause and another one will continue the playback again.

M740

12. Stop

The Stop button interrupts all playback and search functions of the M740.

13. Skip Back/Forth

Jumps towards the next or the previous track or chapter and continues playback there.

14. Before

Returns from the current window to the one you were before: back to the movie, back to the previous menu - exactly the place where you had been before the actual one.

15. Main Menu

Jumps into the main menu.

16. Navigation

Use these buttons to navigate through the menus of your media player – up, down, left and right.

17. OK

OK confirms your entries, selects folders, chooses storage devices or starts playing back selected media files.

18. Time Leap Back/Forth

Jumps back in 15 second steps and forth in 30 second steps during playback. Just press and hold the button for a sequence of leaps.

19. Option

Displays information like file size, playing time, subtitles or video/audio resolution during playback. A second press will close the corresponding window.

20. Slow

Some file formats allow the slowed down playback of a movie. Repeated pressing will lower the playback speed further.

21. Step

Shows continuous still images of a movie. Each press of this button will jump to the next picture/frame, while holding the button will automatically show one picture after the other.

22. Zoom

Zooms into the display window. Repeated pressing will change the zoom factor: 1x, 2x, 3x, 4x and 8x. The image centre moved with the navigation keys in zoom mode.

23. 16:9

Depending on the movie and television format, you can use this button to switch between the 4:3 Letterbox, 4:3 Pan/Scan, 16:9 and 16:10 formats.

24. Angle

Some movies support views from different camera angles. If your movie supports this function, you can use this button to switch between several angles.

25. Menu

Press this button to call up the menu within a movie. However, please do not mistake this for the separate button for the main menu of the M740.

26. Title

Takes you back to the title menu of your movie.

27. TV Mode

Depending on which screen resolution your TV set supports, you can choose the optimum setting for your device here. You can choose from PAL(576i), NTSC(480i), 480P, 576P, 720P at 50 Hz, 720P at 60 Hz, 1080i at 50 Hz, 1080i at 60 Hz, 1080p at 50 Hz and 1080P at 60 Hz.

28. A-B

To repeat a certain passage of a movie, press A-B once at the desired starting position. If you press the button again, the “playback loop” starts at the point you marked with A and ends at the point where you pressed the button again. Pressing the button a third time ends the playback loop.

29. Audio

If a movie offers multiple audio tracks (e.g. different languages) you can select one of them by repeatedly pressing this knob.

30. Subtitle

Pressing this button once opens the subtitle menu, which allows you to playback subtitle files that are included in the movie or in the same folder along with the movie. You can configure settings for subtitle display as desired using the menu. If you press this button again, available subtitles are displayed or disabled automatically in sequence.

M740

Connection

Start by connecting your M740 to mains, then establish a video and audio connection to your TV set and/or your hi-fi system. Now you can integrate your media player into your wired or wireless network and finally add external and internal storage devices carrying movies, music and pictures. The following details will help you getting started.

Power supply

Plug the provided cable into the corresponding connector (7) on the back panel. Please do not use power cables which you suspect to be damaged. Now set the switch (6) to "I" in order to feed the player with power.

Video

HDMI

If your TV set features a HDMI connector, you should make use of it instead of the other video connection options. This way you will benefit from maximum video and audio quality (up to 1080p/60Hz) via digital signal transfer. Use the supplied cable to connect the HDMI interfaces of your M740 and your TV - this will transfer both video and audio signals through one single cable.

Component

If your TV set does not have an HDMI interface, but a Component input consisting of three coloured RCA connectors (12), you should use this option to transfer your video signals. Connect the red, green and blue RCA connectors on your NOXON and your TV with the provided cable. Please note that this will only transfer video signals, which requires an additional connection for audio.

Composite

The yellow RCA connector also carries a video signal which can be sent to the corresponding input of your TV with the supplied cable. However, the other video connectors of the M740 offer a better signal quality. This is why you should use this option only in case the others do not work for you. Also in this case, audio is not transferred together with the video signal, which requires a separate audio connection.

Audio

Analog

If you're not using the HDMI interface of your M740, you can send an analogue stereo audio signal from these two RCA (11) connectors to your TV set or hi-fi system (the left audio channel is coded white, the right one is red). Please note that surround audio signals can only be sent via the digital S/PDIF connectors or HDMI.

Coaxial S/PDIF

This yellow coded RCA connector (13) carries an audio signal in the digital S/PDIF format. Please use a standard RCA cable (not included) to establish the connection with

your TV or hi-fi receiver. Depending on the source file, audio is being transferred without loss in mono, stereo or surround.

Optical S/PDIF

Alternatively, the digital audio signal can be transferred via a light wave cable (not included) according to the TOSLINK standard. Should you use this connection, please make sure to plug in (14) and treat the cable with a certain care so it is not being bent too much.

Wired network (LAN)

Use a standard CAT 5 cable or similar (not included) for integrating your M740 into your home network. Plug one of the RJ45 connectors into the corresponding port (16) on your M740 and the other one into your router, switch or hub. A green LED located at this port indicates a proper connection on both ends of the cable.

Wireless network (WLAN)

If you prefer to integrate the M740 into a wireless network, you can do so by using the optional NOXON WLAN stick which uses the very fast 802.11n standard, featuring data transfer rates of up to 300 MBit/s. It is fast enough to transfer even HD movies without dropping frames. Of course the NOXON WLAN stick also supports the 802.11b and 802.11g standards as well as the WEP, TKZP, AES, WPA, WPA2 encryption/security standards.

Memory cards

The front panel of the M740 features a reader (4) for standard memory cards. You can playback movies, music and pictures from cards which have been inserted into this slot. The card reader supports SD, SD-HC, MMC, MS and MS Pro cards which can also be inserted during operation.

External storage devices (USB)

Your M740 features a total of three USB ports for connecting external storage devices like hard disks and memory sticks – one on the front (5) and two on the back panel (17). The media content of the storage devices connected to these ports can be accessed from the specific menus of your M740. Initialising a new device connected here might take a few seconds.

External hard disk (SATA)

Use the supplied cable to connect a SATA hard disk (not eSATA). Once it has been connected to this port (8), you can play back audio and video data from the external drive. The cable transfers your media data and the power the HDD requires at the same time.

Internal hard disk (SATA)

In addition or as an alternative to an external hard disk you can also retrofit an HDD directly into your media player. Please use a 3,5" SATA standard model, preferably with a

M740

speed of 5,400 RPM in order to keep the noise level as low as possible. Before installing the hard disk, please make sure to disconnect your media player from mains. Now open the SATA bay (19) located on the back panel and insert the HDD carefully with the connectors showing towards the bay and the label showing up. Please make sure not to retain the cover while doing so. After noticing a soft click you can close the cover of the bay.


PC/Mac (USB)

If you have retrofitted your M740 with an internal SATA hard disk as described above, you can establish a connection between your PC/Mac and your media player by inserting a standard USB cable (not included) into the corresponding port (18). Your computer will recognize the NOXON as an external hard disk without the need to install any drivers at all. This is the fastest of several options to transfer media data like movies, music and images to your M740.

Setup

Setup assistant

When you power up the M740 for the first time, a setup assistant will help you to make the most basic settings. You can always execute this assistant anew by going to „Options“ > „System“ > „Default“.

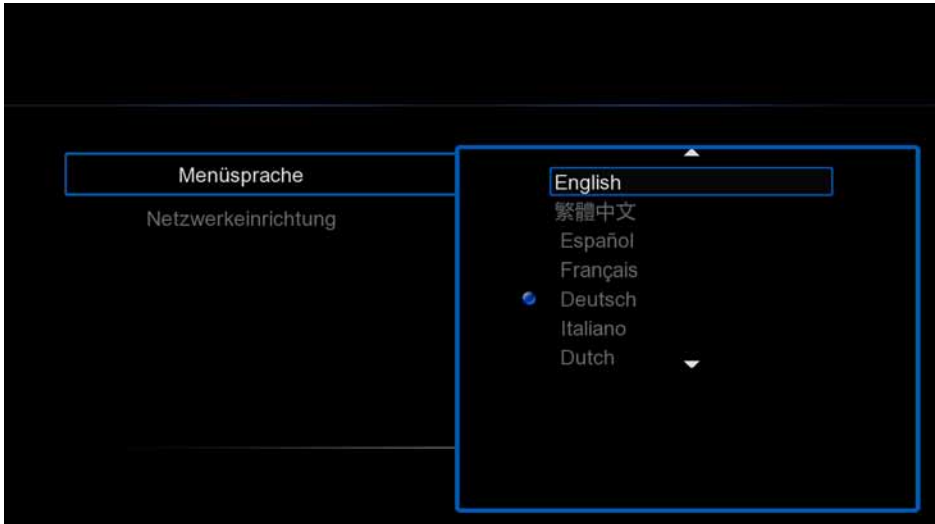

Start by choosing the language for the user interface with the Up/Down navigation and the “OK” button.

The network configuration comes next. If you own a DSL router with an integrated DHCP server, choose “DHCP IP (Auto)” and confirm with “OK”. After confirming the question if you want to save this configuration, your NOXON will automatically connect itself with your network. Advanced users can also run a manual setup by using a static IP address. You’ll find more info on this in the “Network options” chapter.

UPnP server

UPnP means „Universal Plug and Play“. The M740 features an integrated UPnP server which makes it possible to make the media data like movies, music, and pictures stored on its internal HDD available to other UPnP capable devices in the same network.

But the M740 does not only act as a server, but it can also be a client and access/play back media data provided by other UPnP capable devices in the same network.

M740

The M740 in server mode

When used as a server, the M740 provides its media data via UPnP in the network it is connected to. These files can be accessed by additional players (clients) connected to the same network.

Which requirements must be met for UPnP server operation?

- Min. firmware version 1.2.3.5
- Retrofitted internal 3,5" SATA hard disk
- Hard disk must have been formatted with the M740
- Additional software packages must be installed
- Options in the "System" menu must be changed accordingly

How to activate the UPnP server?

The following is a step-by-step explanation about how to configure the UPnP server function on your NOXON M740.

Please make sure to use the latest Firmware version from our website:

<http://www.terratec.net/en/drivers-and-support.html>

Step 1: Firmware check/update

Use the navigation and "OK" buttons of your remote control to select the folder "Options" > "System". The sub item "System Reinstall" shows the version of the firmware which is just running on your device. If this version number is lower than 1.2.3.5, you will need to install a new firmware before proceeding.

Please follow these steps to do so:

- Download the latest firmware for your M740 from the following website:
<http://www.terratec.net/en/drivers-and-support.html>
- Copy the file "install.img" into the main directory of a USB memory stick
- Connect this memory stick to one of the USB ports of your M740
- Select "System Reinstall" and confirm with "OK"
- *Important:* Do not switch the unit off while the firmware update is in progress!

Step 2: Install an internal hard disk

Please use a 3,5" SATA standard model, preferably with a speed of 5,400 RPM in order to keep the noise level as low as possible. Before installing the hard disk, please make sure to disconnect your media player from mains. Now open the SATA bay (19) located on the back panel and insert the HDD carefully with the connectors showing towards the bay and the label showing up. Please make sure not to retain the cover while doing so. After noticing a soft click you can close the cover of the bay.

Step 3: Format the hard disk

In this next step the hard disk will be formatted and prepared for the UPnP server mode.

To start formatting, please select „Setup“, „Options“ and „HDD Format“ in the main menu. A sub-menu will open in which you can select the specific hard disk to be formatted. In our example it is called „HDD1“. A warning will appear.

ATTENTION: Formatting your HDD will delete all files stored on it. Please make sure to backup existing files to another storage device if you will need them in the future.


Next you will be asked for confirmation once more. Select “Format” if you are sure you want to proceed.

Step 4: Installing the required software

The required software packages for the UPnP server mode will be installed automatically after your NOXON has finished formatting the inserted hard disk. Once the installation has been completed, push “OK” in order to re-boot your media player.

Step 5: Activating the UPnP server mode

Finally, the UPnP server mode needs to be activated. In order to do so, please navigate to „System“ > “RC Power Key Function“. Then press the power button on your remote control to activate the UPnP server.

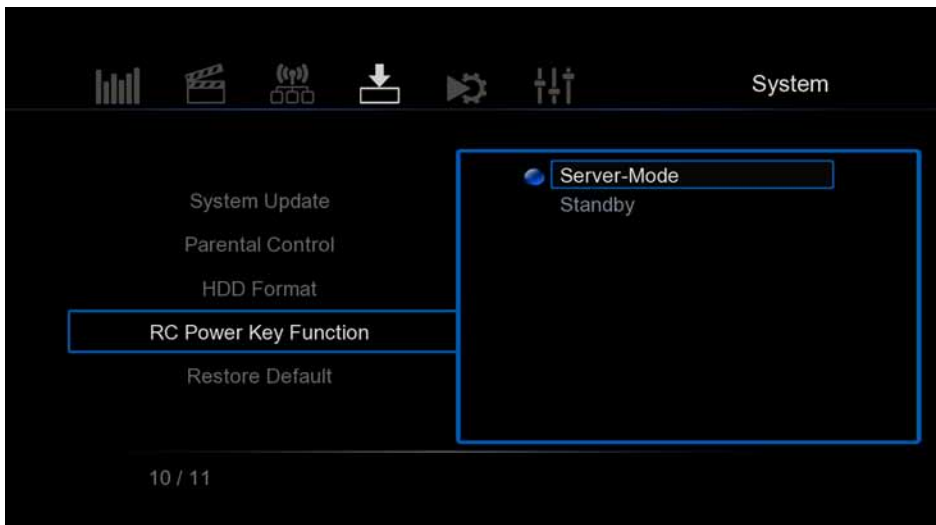

Note: After pressing the power button on your remote control you have the opportunity to cancel the activation process by pressing the button again. Your NOXON will enter the standby mode without activating the UPnP server mode.

A successful UPnP activation will show a “UPnP Server is active” message on your TV

M740

screen. Now are the media files in the folders „image“, „movie“ and „music“ on your hard disk are shared in the network. Other UPnP clients in the same network (e.g. NOXON iRadio) will now show the entry “NOXON M740” in their UPnP server list. This might show up on the clients only after a slight delay.

For advanced users: You can also activate the UPnP server mode while the device is running by pressing the blue button on your remote control. However, this may reduce the performance of your NOXON M740 and the UPnP client.

Adding new media files

You can transfer videos, pictures or audio files from your USB sticks, hard disks or memory cards to your M740 with the integrated file manager. You can also connect your NOXON M740 to your computer via the USB connector (18) on the back of your device and use it as an external hard disk. If the UPnP server mode is activated, files can also be transferred from a device in the same network the NOXON M740 is located in, for example by inserting the IP address of your M740 (e.g. \\192.168.1.19) in the address bar of the Windows Explorer.

ATTENTION: To access your files via the UPnP server please make sure to place them into the correct corresponding folders. In other words, copy your video, picture, and music files into the folders “movies”, “images” and “music”. The UPnP database will update itself every 60 minutes. This may result in a delayed availability of your newly added files. To shorten this process you can restart your media player after adding new files.

How to access the provided files

Once the M740 is set to server mode, external UPnP capable clients can access the files located on its internal HDD. For example, on a connected Windows PC you will find the M740 as a new device in the network environment. On a Mac you can find the M740 in the “Shared” tab of the Finder.

The M740 in client mode

When used as a so called client, the M740 can access and play back media data which are hosted by another device via UPnP in the same network. Please make sure to run the M740 in standard and not in server mode if you want to use it as a client. Of course, you need at least one additional UPnP device acting as the server in this scenario.

Microsoft Windows

Windows Media Player (Version 11 or 12) is the simplest way to add such a server, since it already has this service built in. Via the “Stream” menu item, select the “Enable media streaming” function.

In the following dialogue you now have to enable this service explicitly and then activate the corresponding devices, if you have multiple receivers. Now the NOXON can access the music data in your library.

Mac OSX


Unfortunately, Apple does not supply any UPnP program itself, so it is necessary to rely on a third-party supplier. Elgato offers a solution with its EyeConnect software. This is available for free as a trial version and can be used with the full range of its functions (including video streaming) for 30 days.

Even after this period, however, the Lite version remains available, which makes audio files in the network available without restrictions. You will find this software at Elgato's website: www.elgato.com.

Handling

Typical applications

Listen to music from a USB memory stick

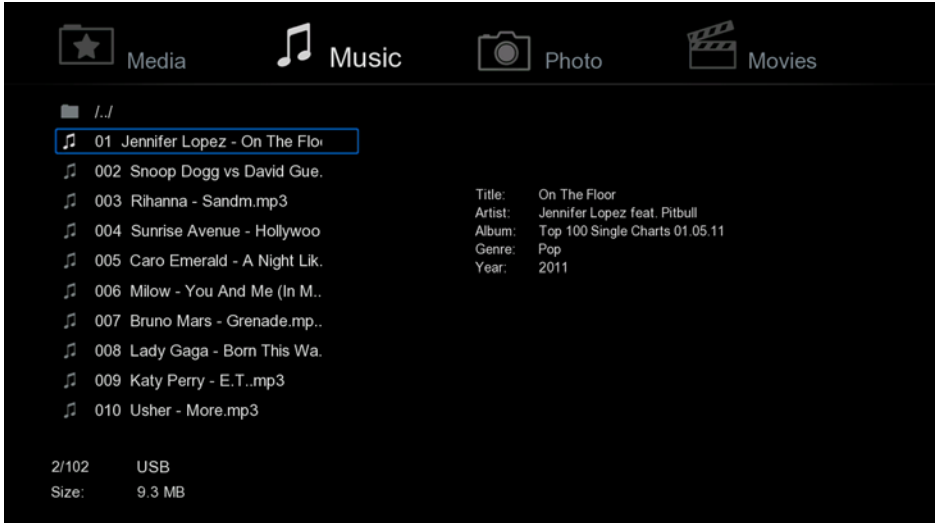

- Plug a USB memory stick into one of the USB ports on the front (5) or the back (17)
- Starting from the main menu, use the navigation buttons Left/Right to access the “Music” menu
- Use the navigation buttons Up/Down to select the “USB” submenu and confirm with “OK”
- If the music you want to play is not located in the root directory of your USB memory stick, use the Up/Down navigation buttons to select the desired folder and press “OK” to access this folder
- Select the song you want to start with the Up/Down navigation buttons and press “OK” to start playback

Watch photos from a memory card

- Insert a memory card into the card reader on the front panel (4)
- Starting from the main menu, use the navigation buttons Left/Right to access the “Photo” menu
- Use the navigation buttons Up/Down to select the “Card” submenu and confirm with “OK”
- If the music you want to play is not located in the root directory of your USB memory stick, use the Up/Down navigation buttons to select the desired folder and press “OK”

to access this folder

- Select the photo you want to start with by the Up/Down navigation buttons and press “OK” to start the slide show

Watch a movie from the internal hard disk

- This requires the installation of a 3.5” SATA hard disk (not included). Please have a look at “Installation - Internal Hard Disk” for more information.
- Starting from the main menu, use the navigation buttons Left/Right to access the “Movies” menu
- Use the navigation buttons Up/Down to select the “HDD” submenu and confirm with “OK”
- If the music you want to play is not located in the root directory of your USB memory stick, use the Up/Down navigation buttons to select the desired folder and press “OK” to access this folder
- Select the movie you want to watch with the Up/Down navigation buttons. The preview located on the right side of the screen will help you making your selection. Now press “OK” to start your home cinema

M740 used as network file server


- This requires to setup your M740 for network use, the installation of a 3.5” SATA hard disk (not included) and the installation of a UPnP server software. Please have a look at “Setup - UPnP server” for more information.
- Use the power button of your remote control to activate the UPnP server mode. Once the short initialization has been completed, other UPnP capable devices in the same network can access and play back media files locate on the internal HDD of the M740.
- You can also activate the UPnP server functionality while the M740 remains in standard mode by pressing the blue button (5) on your remote control. However, this may reduce the performance of your NOXON M740 and the UPnP client.

Main menu

The main menu of your NOXON M740 consists of the following items:
Media, Movies, Music, Photo, Data, Setup

You can navigate between the main items using the Left/Right navigation buttons on the remote control and select additional options within a main item using the Up/Down button. Use the “OK” button to confirm your selections or execute functions.

The sources from which you can play back your media are available by using the Up/Down buttons in the Media, Movies, Music and Photo menus. Depending on which data carriers you have connected to your M740, some options may be displayed or hidden. Thus, for example, the USB storage medium item is displayed only if you have also connected a USB data carrier.

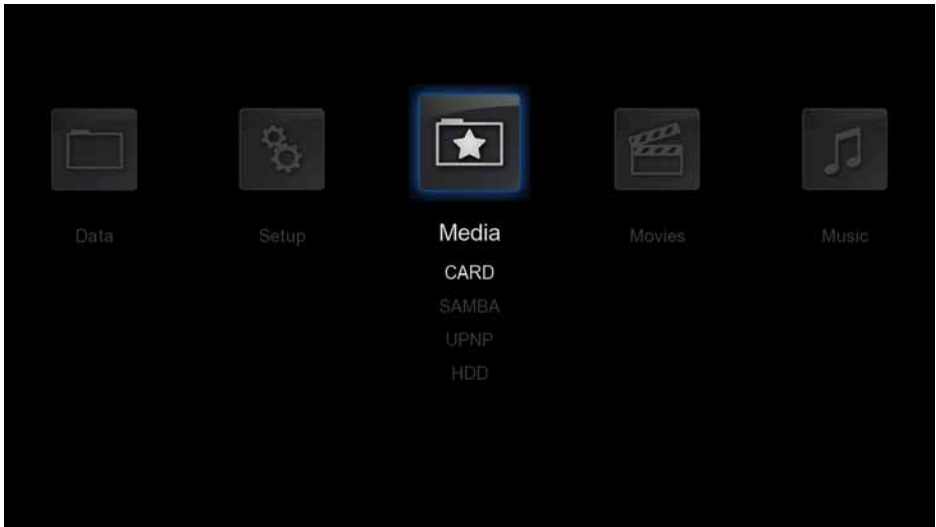

You can always use the “Before” button (14) on your remote to return to the window where you had been before changing to the one which is currently displayed. Also, the main menu button can be used in any situation to return back there.

Note: If you have selected the Photo menu item, for example, although you wanted to call up Movies, you do not have to navigate back to the main menu overview. After the selection, you can switch the display between videos, photos and music via the Left/Right navigation buttons. The currently selected filter is displayed at the upper edge of the screen!

Media menu

This menu shows a list of all movies, photos and music available on a selected storage device. Please find the supported file formats in the following chapters and in the appendix. File formats which are not supported by the M740 will not be shown in the list.

Starting from the main menu, use the navigation buttons Left/Right to access the Media menu, select a storage device and confirm with “OK”.

Now you can use the Up/Down, “Before” and “OK” buttons to navigate through the folders. On the right side you will find a preview for movies and images (if available) or further information on songs. Once you have found the media files you were looking for, just press “OK” or “Play” for watching or listening to them.

Movies menu

This menu functions the same way the Media menu does. However, while the Media menu lists all available media files including pictures and audio files as well, the movies menu only shows the video files available on the selected storage device. You can play back movies in the following file formats: MPEG-1, MPEG-2, MPEG-4, Xvid, WMV9, ISO, VOB, IFO, MP4, DAT, MOV, AVI, MKV, TS and M2TS.

Music menu

This menu exclusively lists the audio files available on a selected storage device. The supported file formats are MP3, OGG, WMA, WAV, AAC, and FLAC.


Photo menu

Finally, this menu only shows the image files on a selected storage device. The supported file formats are HD-JPEG, JPG and BMP.

Data menu

This menu makes it possible for you to move or copy video and music files and photos conveniently between several storage devices. This way you can e.g. copy videos or photos from external data carriers such as an SD card or USB stick to the internal hard drive (not included).

Starting from the main menu, select the Data menu via the “OK” button on your remote control. Now you will see two columns – on the left side there is a list of possible source data carriers and on the right side you can find possible target data carriers.

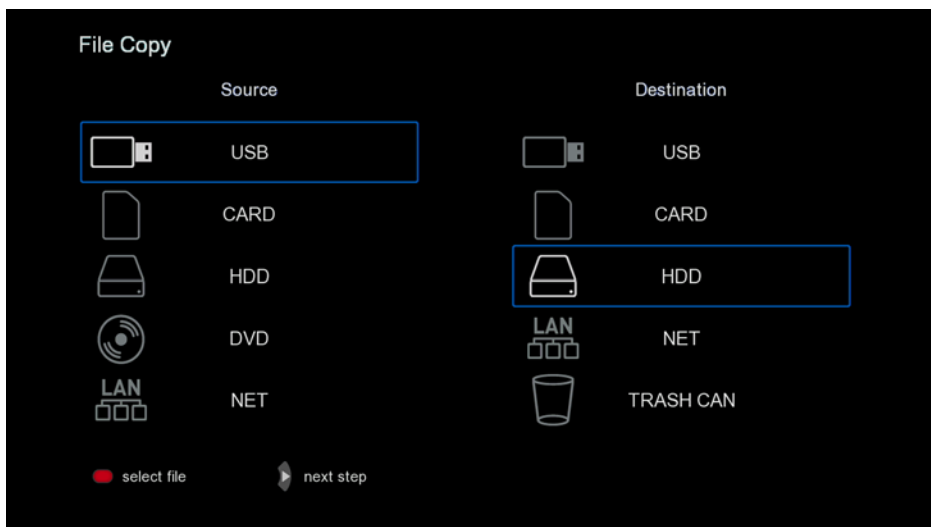

M740

First, on the left side, use the Up/Down navigation buttons and the “OK” button to select the source drive from which you would like to copy files. The M740 then automatically jumps into the target window where you can select a drive the same way. Should you want to change the source drive at this point, use the Left navigation button to return to the source window.

Note: The file manager always shows all supported source and target storage devices – even when they are not connected at the moment. For example, the items “Network” or “DVD” (for an external DVD drive connected via USB) will be shown even when only a USB memory stick and the internal HDD are connected to your M740. However, files can only be transferred between currently connected targets and sources.

The next step takes you to the list of available files. Should you use sub folders to organize your files, you can select the desired folder with the Up/Down navigation buttons and access it with “OK”. Now use the Up/Down buttons to go to the movie, music and image files you want to copy or move and select them with the red option button on your remote. Pressing the red button on an already selected file will deselect it.

When you have finished selecting files, press the Right navigation button in order to select a target folder the same way used for the source. You can also use the “New directory” function and the automatically displayed on-screen keyboard to generate and name a new target folder. After you have selected the desired target folder, press the Right navigation key again.

This will give you the following options:


- **Copy:** Writes a copy of the selected source files into the target folder. The source files remain in their original location.
- **Move:** The selected files are removed from the source folder and moved into the target folder.
- **Cancel:** Returns to the previous file selection window.

WARNING! If you select trash as the target directory, the selected files will be irretrievably deleted!

Setup menu

Use this menu to configure all available options on your M740. Starting from the main menu, use the navigation buttons Left/Right to access the “Setup” menu and confirm with “OK”. Now you will be shown six submenus which you can select with the Left/Right navigation buttons: Audio, Video, Network, System, BD/DVD and Misc.

If you want to access a specific function in one of these submenus, select the one you are looking for with the UP/Down navigation buttons and confirm with “OK”. The “Before” button takes you back to the previous window if needed.

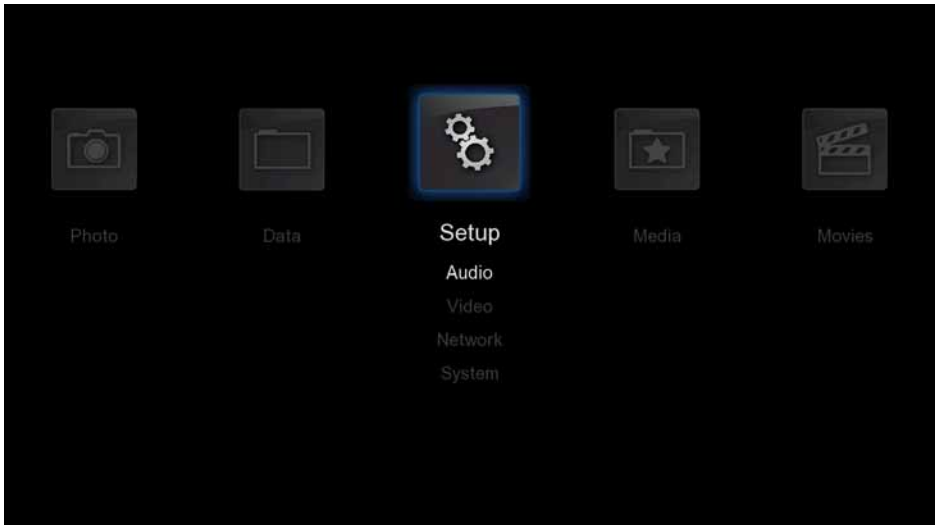

Audio options

Night Mode

The maximum volume and the intensity of changes in volume (dynamics) can be reduced in two steps (“On” and “Comfort”). This helps you to maintain an adequate volume e.g. during night time.

Default Audio Setup

Choose a digital output for audio signals and a corresponding mode.

- *HDMI Dual CH (downmix)*

Stereo signals will be transferred as such, but surround signals will also be converted into stereo. Use this option if you are listening on the integrated stereo speakers of a TV set which has been connected via HDMI.

HDMI Multi CH

This mode will not convert surround signals into stereo like above, but transfer them as multichannel audio via HDMI.

HDMI RAW (BITSTREAM)

This mode will transfer digital audio signals without any changes via HDMI. Use this option if you want to transfer digital audio signals like Dolby Digital, DTS or MPEG to an external digital hi-fi receiver.

S/PDIF DOWNMIX PCM

The same as above, but in this case the digital audio signals will not be transferred via HDMI but through the S/PDIF output of the M740.

- *S/PDIF RAW (BITSTREAM)*

The same as above for S/PDIF instead of HDMI.

M740

Advance Audio Setup

This item lets you define special output settings for various audio modes (AC3, DTS, AAC, WMA Pro). This is useful if, for example, your television does not support DTS output. In this case, you can route the audio output via S/PDIF if a DTS audio channel is present.

Video options

Aspect ratio

- *Pan Scan 4:3*

Makes a widescreen image fill the entire screen, cutting off the outermost left and right ends. Select this if a standard 4:3 TV is connected.

- *Letter Box 4:3*

Displays a widescreen image on a 4:3 TV with black bars at the top and bottom. Select this if a standard 4:3 TV is connected.

- *16:9*

Sets the aspect ratio to 16:9. Select this if a 16:9 widescreen TV is connected.

- *16:10*

Sets the aspect ratio to 16:10. Select this if a 16:10 widescreen TV is connected.

Video system

Select the a combination of resolution and frequency which corresponds with the specifications of your TV set. You can find this information in the manual of your TV. If you are using the HDMI cable, set this option to HDMI Auto which will automatically identify the correct values for you.

SD video system

Here you can choose the video standard which is broadcasted in your country:

- *PAL*

Europe, Greenland, parts of Africa and South America, the Middle East, China, India, Australia and Indonesia.

- *NTSC*

United States, Canada, Japan, Mexico, The Philippines, South Korea and Taiwan.

1080P 24Hz

The so called "cinema mode". Some movies can be played back at 24 images per second, just like with the original film reels in the cinema. If this option is active, the M740 can play back such movies without any conversions which could otherwise reduce the image quality.

Scan mode

- *Full Pixel (Just Scan)*

For LCD, Plasma or LED TVs with a digital connection

- *CRT TV (Over Scan)*
For TV sets with Cathode Ray Tubes (CRT)
- *LCD TV (Over Scan)*
For LCD, Plasma or LED TVs with an analogue connection

Preview Set Time

This option lets you select at how many percent of the total runtime of a movie the preview starts. This way you can easily skip intros and trailers in order to let the preview start right in the middle of action.

Brightness, Contrast, Hue and Saturation

We have selected the defaults to provide a well-balanced picture, but if you want it brighter, more colourful or with higher contrast, you can make all the adjustments to suit your needs here.

Digital Noise Reduction

If you notice annoying image noise or pixelated frames, you can improve the image quality within certain limits by activating this function.

Network options

Wired LAN Setup

- *DHCP IP (Auto)*
Most routers and switches can be connected with the M740 without extended knowledge of networks. Select this option if your router supports DHCP and if you do not want to set up a fixed IP address.
- *Fix IP (Manual)*
Select this to enter the IP address, subnet mask, default gateway and DNS server IP address manually.

Wireless Setup

The optional NOXON WLAN stick (not included) must be plugged into one of the USB ports of the M740 in order to set up a wireless network connection. Please also refer to the manual which comes with the WLAN stick.

- *Connection profile*
Your NOXON M740 can store up to three WLAN connections. Press "OK" to go to the next step, the "Before" button to cancel.
- *Connection mode*
Choose between Infrastructure (AP) and Peer to Peer (Ad Hoc). *Note:* If you have a normal DSL router, you will usually use Infrastructure. If your router supports a so called "WiFi Protected Setup", you can choose WPS as your connection mode. The Peer to Peer mode (also called Ad Hoc or Computer to Computer mode) is used in order to directly connect WLAN capable devices with each other - you will not need a wireless router or Access Point in this case.

M740

- **SSID Name**


This menu shows a list of available wireless networks together with their signal strength and encryption. The abbreviations “WEP” (Wired Equivalent Privacy) and “WPA” (WiFi Protected Access) in the security list indicate that the network is encrypted. This means that a key is needed to have access to this network. “None” in the list means that the network is open and unencrypted.

- **WEP/WPA key**

The password for encrypted networks can be entered via the on-screen keyboard using the remote control. Use the navigation buttons to select and press “OK” to enter the desired characters. Press “CAPS” to permanently toggle between upper and lower-case letters, “<-” to delete a character, “[]” to insert a space, “shift” to insert a single upper-case letter, and “OK” in order to confirm your entries and proceed.

- **Connection test**

The test process can take some time – please have a little patience. If the test is successful, the network information (profile name, IP address, subnet mask, gateway etc.) will be displayed on the screen afterwards.

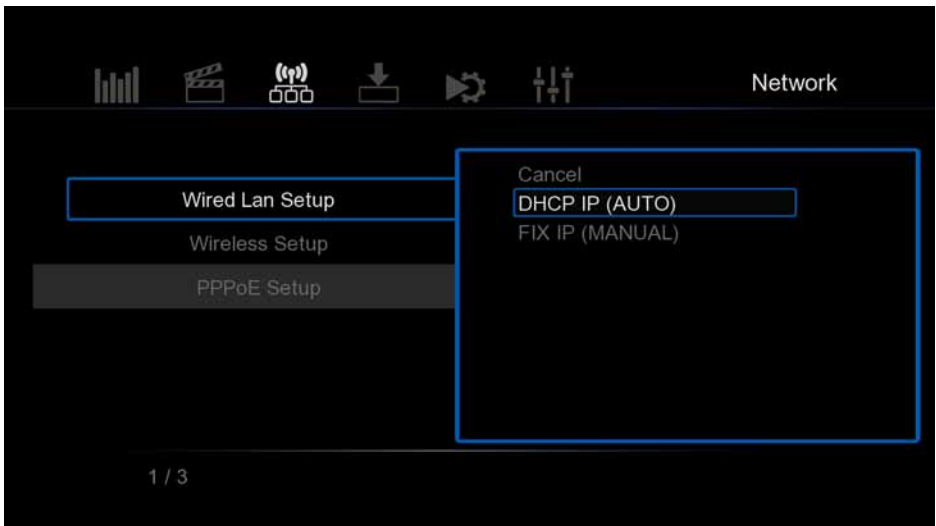

System options

Menu language

Select the OSD (On Screen Display) language here.

Text Encoding

“Unicode (UTF8)” should be used for most countries. However, you can make different settings for countries which are using a specific character set (e.g. Greece and Turkey).

Subtitle Automation Recognition

If a synchronised movie uses subtitles for dramaturgic reasons (e.g. Klingon or Elfish), this stylistic device is called “Forced Subtitles”. You can activate or deactivate these being displayed here.

Subtitle Font

You can choose from several styles of lettering/fonts for displaying movie subtitles.

System Info

This sub menu lists installed services like Samba and UPnP servers. If you want to install such components, please go to the next menu “System Update”.

System Update

- *Extension Package Upgrade*

Use this sub menu to install additional services like Samba and UPnP servers. This requires retrofitting an internal SATA hard disk (not included) first. Please press “OK” only once and then have a little patience, as the installation will take a short while.

- *System Reinstall*

Use this sub menu to install an updated version of the M740 firmware. Please read the chapter “Setup: UPnP Server” for details on how to proceed.

HDD Format

This menu item executes the program to format your internal hard drive (not included). *Attention:* If you format your HDD, all data on the drive is deleted and cannot be recovered!

RC Power Key Function

This option determines the function of the standby button (2) on your remote control.

- *Server Mode*

Pressing the standby button once activates the server mode, while pressing it a second time will set your M740 into standby mode.

- *Standby*

Pressing the standby button activates the standby mode immediately.

Restore Default

Select this menu to reset all settings you have entered and restore the factory defaults of the device.

BD/DVD options

Audio Language

Choose a language for the audio tracks of your movie (of course, this language must be included in your movie file).

M740

Subtitle Language

Here you can choose the language for the subtitles (which also needs to be included in your movie file in order to be displayed).

R/RW Auto-Play

If you have connected an external CD/DVD drive via USB and you have activated this option, playback will start automatically when a disc is inserted into this drive.

Angle Mark

Some movies feature views from several camera perspectives/angles. Here you can choose if your M740 can access these or not.

BluRay Folder AutoPlay

Some movies have not been saved as one complete big file, but have been sliced into several smaller ones instead. If this option is active, the M740 can play several associated single files in one run without interruption.

Misc options

UI Change Effect

Sets the speed at which the M740 cross-fades from one menu to the next one.

Resume Play

This option, when enabled, stores the position at which you interrupt a movie. The next time you call up the movie, the M740 offers to resume playback from this point.

Slide Show Timing

Select the interval time for slide shows here, i.e. how long the individual pictures will be displayed. If this option is set to "Off", the images will not be displayed in an automatic slide show, but have to be triggered manually with the Skip Back/Forth buttons (13).

Transition Effect

Select one of several transition effects between photos in slide show mode.

Ken Burns

This option enables/disables the characteristic slide show visual invented by Ken Burns.

TS Seamless playback

Plays multi-part TS files that belong together in one run without interruption.

Background music

If the directory on your storage medium that holds the images also contains additional audio files, these can be played when the slide show starts. You can enable/disable this option here.

Screen Saver

The M740 features a screen saver which becomes active after a longer period of inactivity. You can activate and deactivate this function here.

Movie Preview

The automatic movie preview can be disabled here.

Navigation Key Functions

- *Subtitle Adjustment*

The navigation buttons are used to change the position of the subtitles during playback.

- *Playback Control*

The navigation buttons are used to skip back/forward in a movie on an overlaid time line during playback.

Appendix

Technical specifications

Video formats:

MPEG-1, MPEG-2, MPEG-4, Xvid, WMV9, ISO, VOB, IFO, MP4, DAT, MOV, AVI, MKV, TS, M2TS

Audio formats:

MP3, OGG, WMA, WAV, AAC, FLAC including DTS, Dolby Digital, WMA and AAC-downmix support

Image formats:

HD-JPEG, JPG, BMP

Connectors:

- Power supply:
 - 230 V~ 50 Hz, Maximum power consumption 12 W
- SATA:
 - External SATA hard disk drives (not eSATA)
 - Internal SATA hard disk bay 3.5" format
- Video:
 - HDMI 1.3a (up to 1080p/60Hz)
 - Component (RGB)
 - Composite
- Audio:
 - Analog (stereo)
 - S/PDIF coaxial (stereo and surround)
 - S/PDIF optical (stereo and surround)
- LAN:
 - 10/100 Mbps, RJ-45
- USB:
 - 3 x USB 1.0/1.1/2.0 up to 480 Mbit/s
- PC/Mac:
 - File exchange via USB when an internal SATA drive is retrofitted
- Card reader:
 - SD/SD-HC/MMC/MS/MS Pro

License information

License information about the GPL/LGPL software used in this device.

This product uses free software ("freeware") licensed under GNU General Public License, version 2 or higher. After purchasing this product, you may want to edit, modify or redistribute the source code of the included GPL/LGPL software.

If you contact our Support department, they will be glad to provide the corresponding sources. For this purpose, visit our website at www.terratec.de and download the corresponding sources or order them on a CD-ROM, though this will incur corresponding material and shipping costs to your account (before ordering one of these CD-ROMs, please find out what the current costs are).

Important note! We assume no warranty of any kind for the corresponding source codes and provide no support for the data material provided.

License information for the software used in the unit:

This product contains Free Software which is licensed under the GNU General Public License version 2 or greater. After you purchase this product, you may procure, modify or distribute the source code of the GPL/LGPL software that is used in this product.

The according source codes can be obtained from our website www.terratec.de or by contacting our Support Center which will provide a CD-ROM charging only the actual expensed involved (please ask for the actual fee for CD-ROM first). However, please be noted that we cannot provide guarantee with the source code, and there is also no technical support for the source code from us.

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright(C) 1989, 1991 Free Software Foundation, Inc.
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA
Everyone is permitted to copy and distribute verbatim copies
of this license document, but changing it is not allowed

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you

must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software. Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The „Program“, below, refers to any such program or work, and a „work based on the Program“ means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term „modification“.) Each licensee is addressed as „you“.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no

charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself ac-

companies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by

patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and „any later version“, you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM „AS IS“ WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

